



**Notes:**

- 1) Requires external regulated +5 supply
- 2) -9V rail generated from RS232 TXD line
- 3) C1 Tantalum polarity, +ve leg to GND

<b>Thunderbolt Commander</b>		
Send predefined control packets to Thunderbolt		
by Adam Maurer VK4GHZ	Rev 1.0 8/12/2011	